

Corner Shelf with Doors

4-TIER MODEL | PARTS & HARDWARE



01 Side support frame
Qty 2

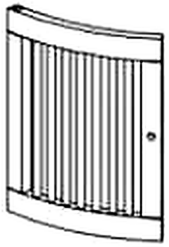

02 Door
Qty 2



03 Open shelf
Qty 2



04 Cabinet shelf
Qty 2



06 Base support post
Qty 1



07 Door pivot pin
Qty 4



08 Door catch
Qty 1



09 Metal strike plate
Qty 2



10 Ring handle
Qty 2



A Hex socket screws



B Phillips screws

With doors


Without doors

Scan to watch the assembly video.

Corner Shelf with Doors

4-TIER MODEL | ASSEMBLY INSTRUCTIONS | Steps 1-3


01 Prepare the doors

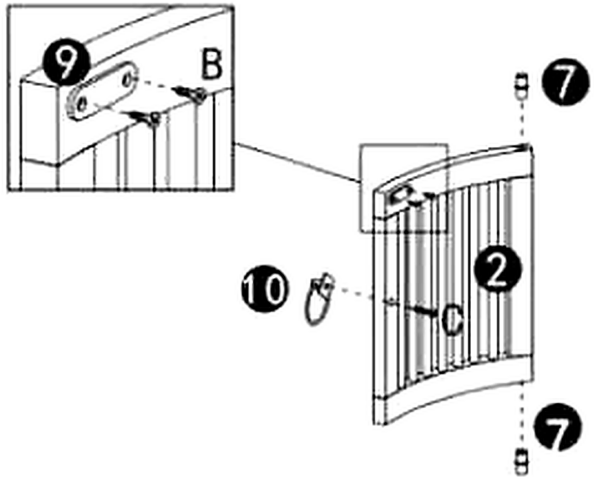

Attach one metal strike plate 9 to each door 2 using screws B. Attach one ring handle 10 to each door. Insert a door pivot pin 7 into the top and bottom of each door.

Repeat for both doors.


02 Attach the door catch

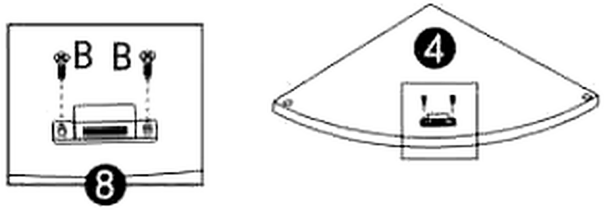

Attach door catch 8 to one cabinet shelf 4 using screws B, as shown. This shelf will form the top of the door compartment.

Keep this shelf ready for Step 6.

03 Attach the base support post

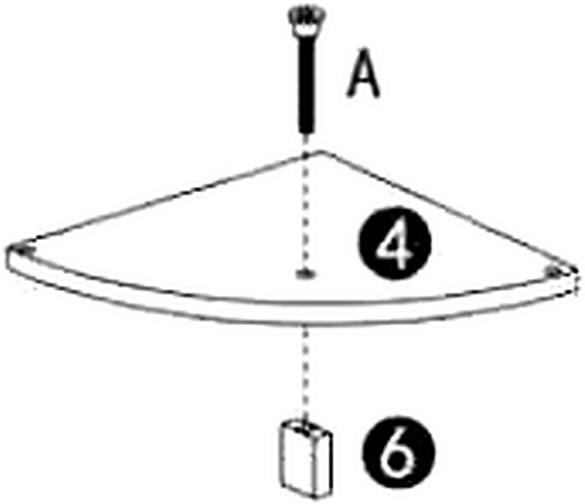


Attach base support post 6 to the other cabinet shelf 4 using screw A, as shown. This shelf will form the bottom of the door compartment.

Keep this shelf ready for Step 4.

Corner Shelf with Doors


4-TIER MODEL | ASSEMBLY INSTRUCTIONS | Steps 4-5

04 Attach the side support frames

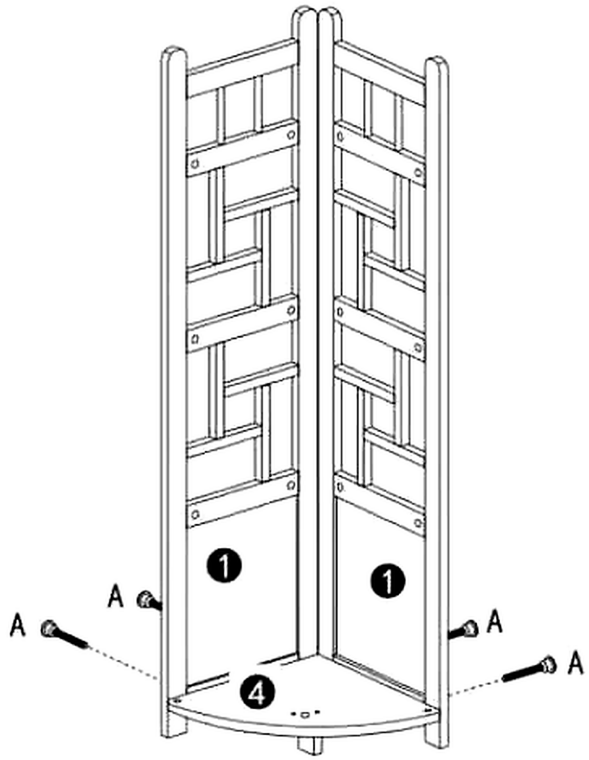

Position the two side support frames 1 at right angles, as shown. Attach the lower cabinet shelf 4 prepared in Step 3 to both frames using screws A. Keep the base support post 6 beneath the shelf.

05 Fit the doors onto the lower shelf

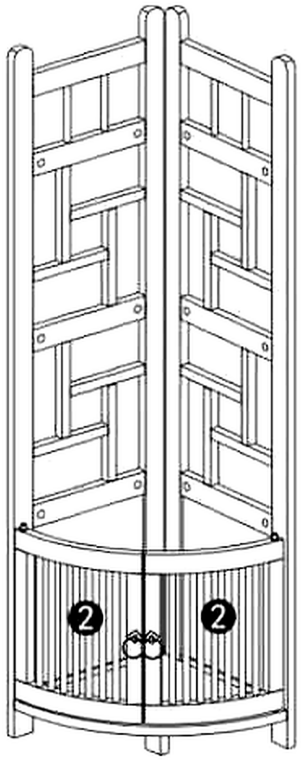


Insert the lower pivot pin 7 on each door 2 into the corresponding hole in the lower cabinet shelf 4. Position both doors as shown.

The upper pivot pins will be secured by the shelf fitted in Step 6.

Corner Shelf with Doors

4-TIER MODEL | ASSEMBLY INSTRUCTIONS | Steps 6-7


06 Fit the upper cabinet shelf

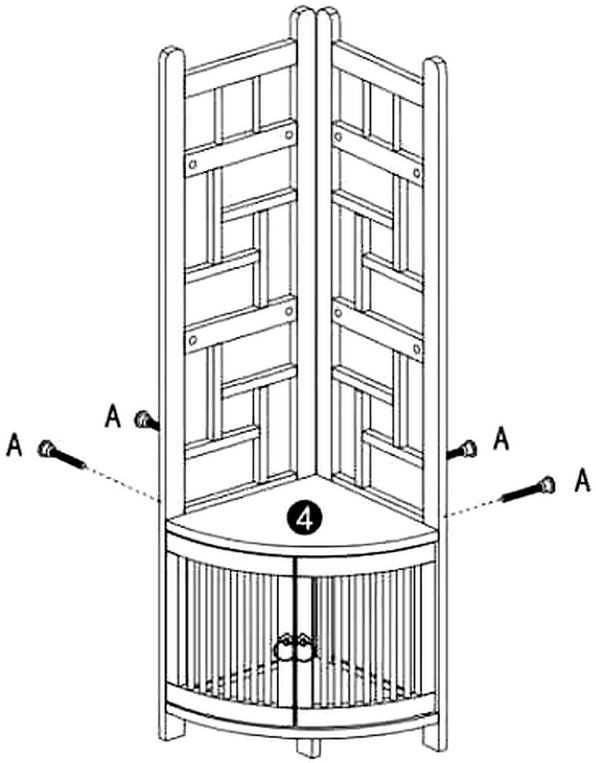

Lower the cabinet shelf 4 prepared in Step 2 onto the upper door pivot pins 7. Make sure both pins enter the corresponding holes, then secure the shelf to the side support frames 1 using screws A.

The door catch must face into the door compartment so it can engage with the strike plates.

07 Attach the open shelves

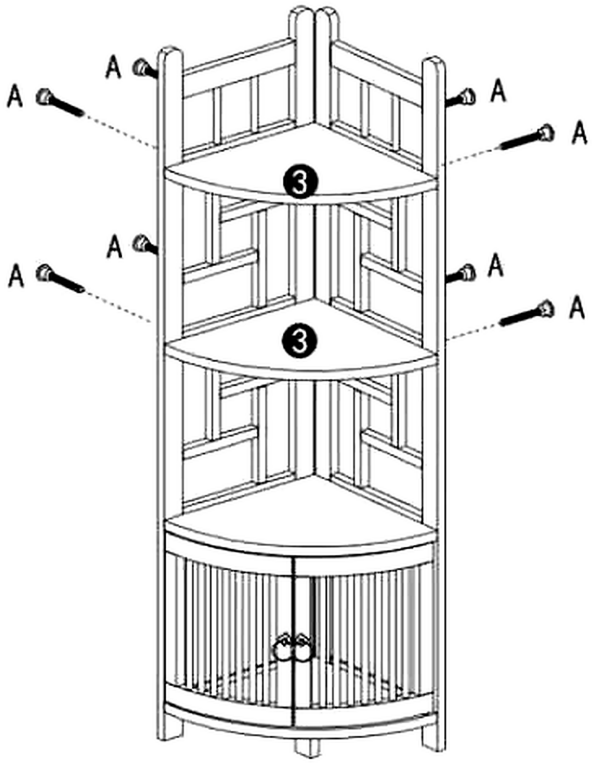

Attach the open shelves 3 to the side support frames 1 using screws A, as shown. Check that all screws are secure and that both doors open and close freely. Assembly is complete.