3-Tier Bamboo Trolley

ZHUYSHUI-109-3 | PARTS & HARDWARE



01 Handle



02 Long upright



03 Short upright

With threaded insert



04 Long side frame



05 Short side frame



06 Long side rail



07 Short side rail



08 Shelf panel



Swivel casters



Hex socket screws




Hex key

3-Tier Bamboo Trolley

ZHUYSHUI-109-3 | ASSEMBLY INSTRUCTIONS | Steps 1-2


01 Build the long-upright end frame

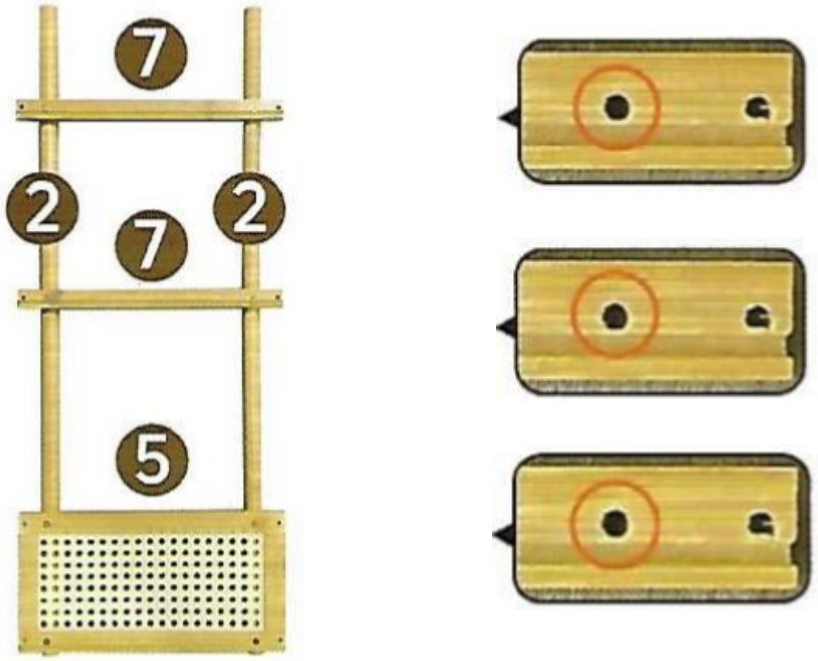

Take the two long uprights 2. Position the end with the two closely spaced holes at the bottom. Connect the uprights with two short side rails 7 and one short side frame 5, as shown, using the hex socket screws.

IMPORTANT: The grooves in parts 7 and 5 must face downward. Fit the screws into the inner holes shown in the detail views.

02 Build the short-upright end frame

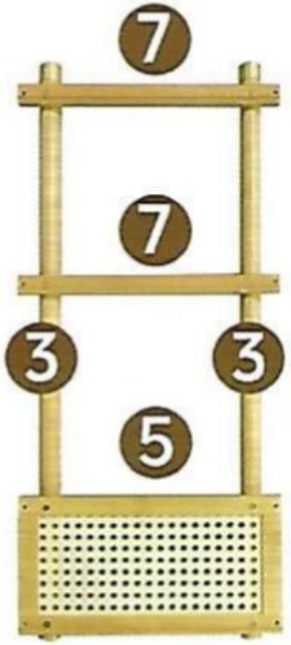


Repeat Step 1 using the two short uprights 3, two short side rails 7 and one short side frame 5. Connect the parts using the hex socket screws, as shown.

IMPORTANT: Keep the grooves facing downward, as in Step 1.

3-Tier Bamboo Trolley

ZHUYSHUI-109-3 | ASSEMBLY INSTRUCTIONS | Steps 3-4

03 Attach the long side rails and frames

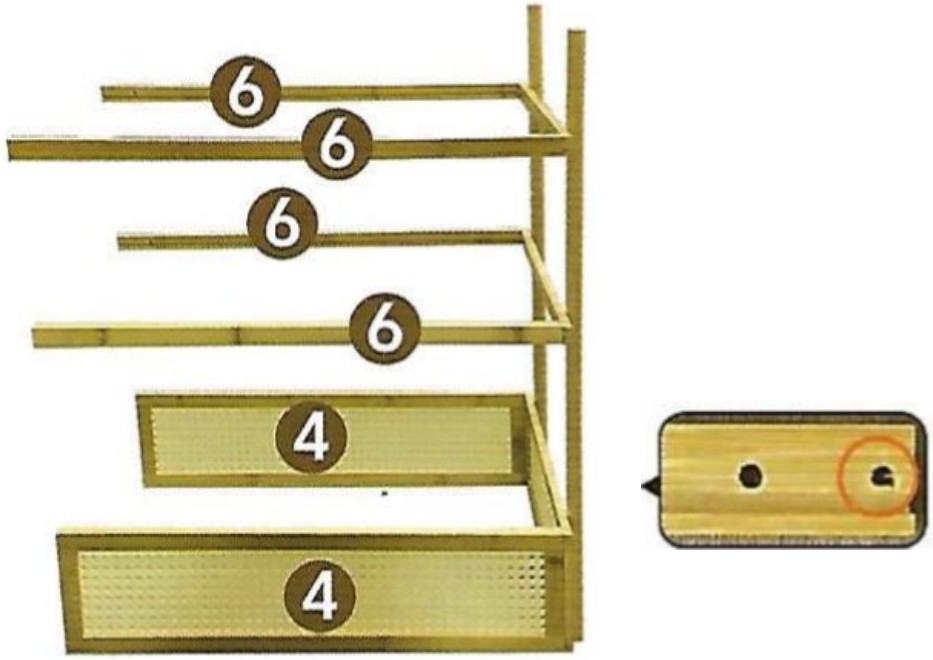

Take the end frame with the long uprights 2 from Step 1. Attach the long side rails 6 and long side frames 4 using the hex socket screws, as shown. Align the grooves at each shelf level.

IMPORTANT: Position the grooves so they face inward and downward, as shown in the detail view.

04 Insert the shelf panels




Carefully lay the partly assembled frame on its side, as shown. Slide the three shelf panels 8 into the matching grooves in the long side rails 6 and long side frames 4.

IMPORTANT: Make sure every panel is fully seated in its grooves before fitting the second end frame.

3-Tier Bamboo Trolley

ZHUYSHUI-109-3 | ASSEMBLY INSTRUCTIONS | Steps 5-6

05 Fit the second end frame

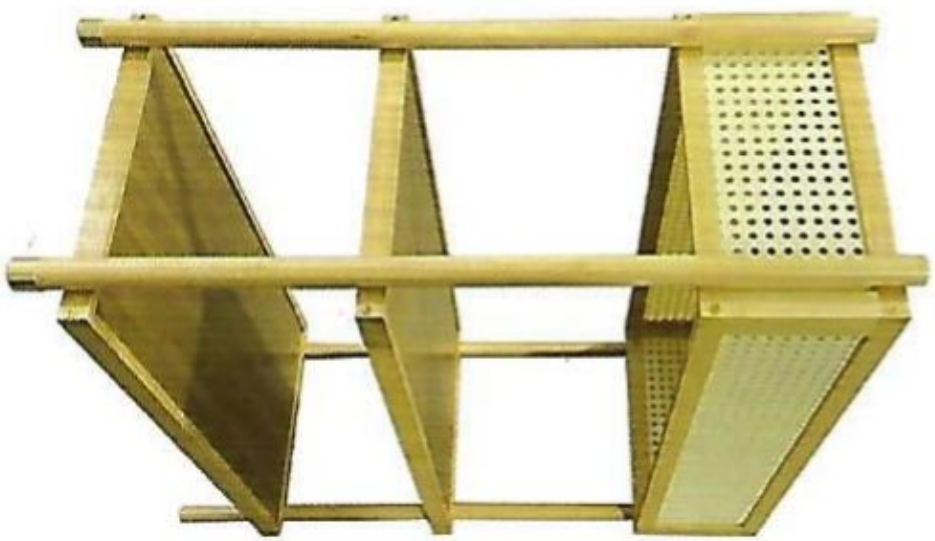

Check that all shelf panels 8 are seated in their grooves. Take the short-upright end frame from Step 2, align its grooves with the panel edges, and fit it onto the open side of the assembly. Secure it using the hex socket screws.

06 Attach the handle and casters



Attach handle 1 and install the swivel casters, as shown. Stand the trolley upright. Assembly is complete.

ASSEMBLY VIDEO
Scan with WeChat to watch the assembly video.